




## FITTING INSTRUCTIONS

### 35D

Before Fitment please ensure Anti Roll Bar is clean.  
Orientate groove to uppermost U clamp/ exhaust clamp - top facing under chassis.  
Groove will clamp and close up causing the clamping pressure.

The bag for 35D contains 2x 35D castings.

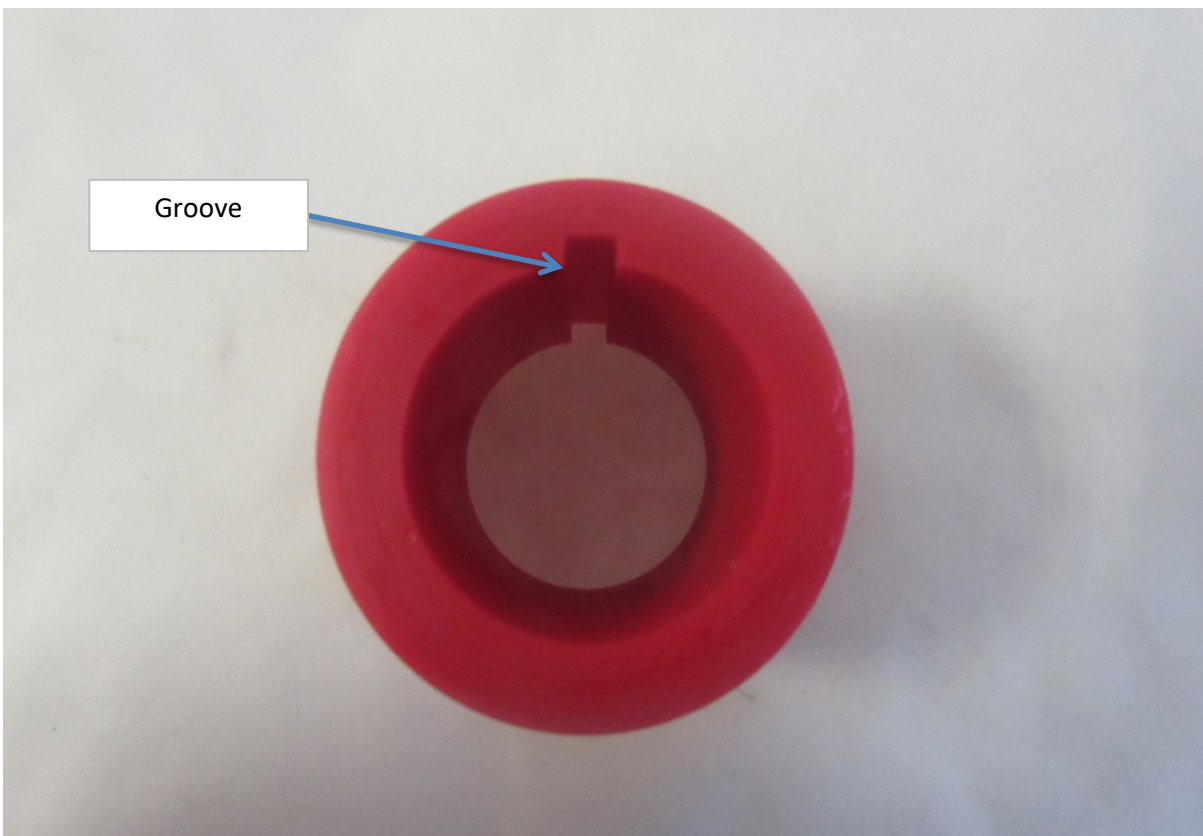

If you have any questions regarding the fitment of these bushes, please give us a ring on 01978664316 or send us an e-mail on [sales@polybush.co.uk](mailto:sales@polybush.co.uk).

