


27 Series Fitting Instructions – KIT 206

27AG Diff
Housing

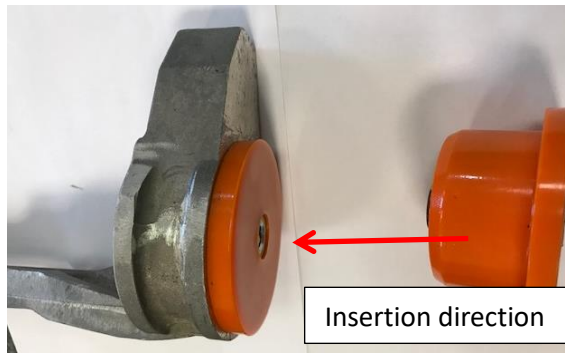

Insertion direction

27AH x 2 Front Upper Wishbone


Insertion direction



Insertion direction

27AL – Front Damper Bush

Insertion direction

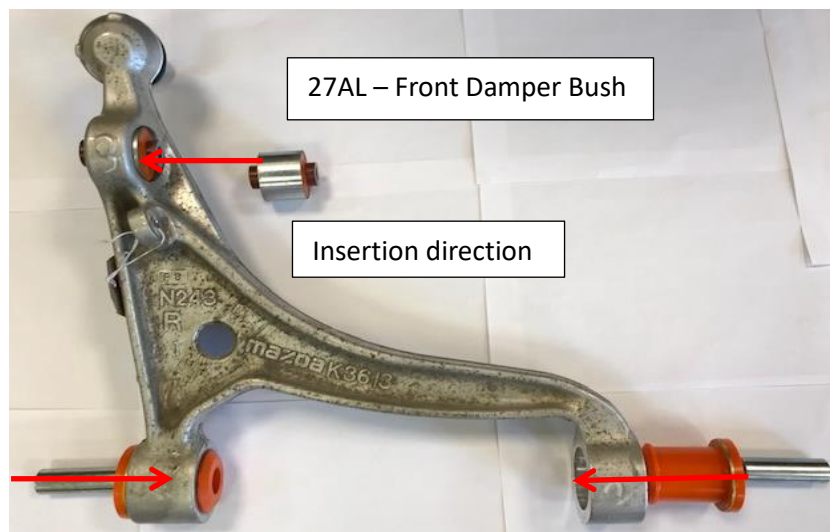

27AJ – Front
Lower Wishbone
Front Bush

Insertion direction

27AK – Front
Lower Wishbone
Rear Bush

Insertion direction