



FITTING INSTRUCTIONS

12AM & 12AN Front Lower Wishbone Bushes

Front - 12AM Contains:
2 x 12AM Bushes
2 x Inner Tubes
2 x Outer Tubes

Rear - 12AN Contains
2 x 12AN Bushes
2 x Inner Tubes
2 x Outer Tubes

Step 1:
Remove existing bushes.

Step 2:
Ensure bores are clean from debris and remove any sharp edges.

Step 3:
Align the outer metals with the wishbone bores. The chamfered edges should be facing down leading into the bore.


Step 4:
Press the outer metals into the housing until the grooved line is aligned with the top surface of the wishbone.

Step 5:
Apply washing-up liquid or similar, to the leading edges of the bushes and push the bush into the outer tube until the flanges are fully seated.

Step 6:
Insert the inner tubes until flush with either side of the bushes.

Step 6:
Refit to the car and torque to manufactures settings when at ride height.

Step 7:
Repeat for the opposite side.

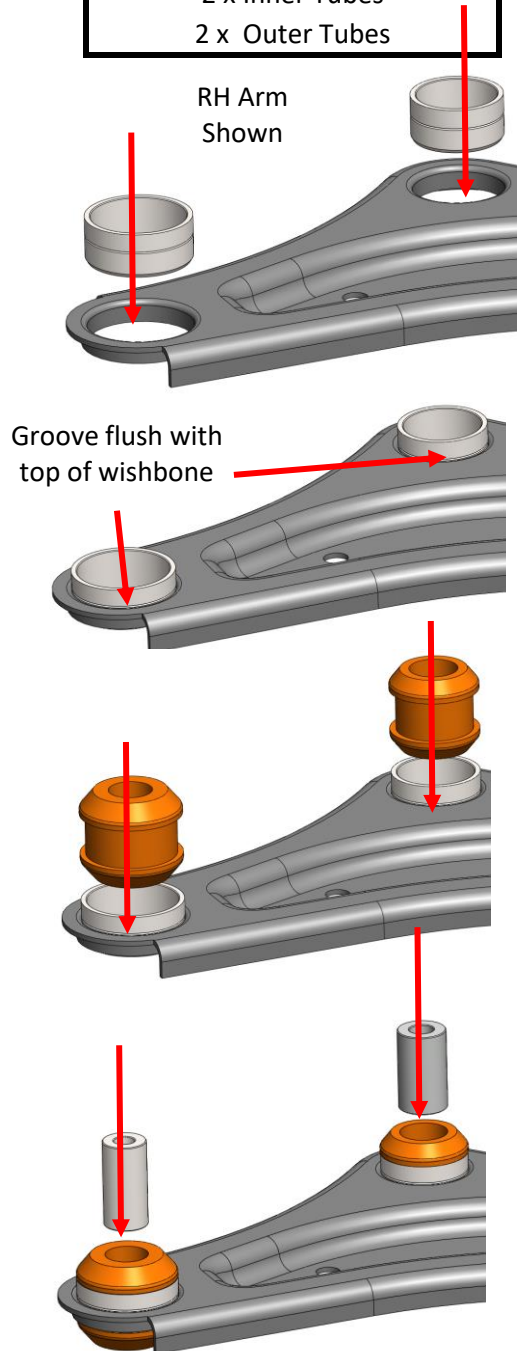

If you have any questions regarding the fitment of these bushes, please give us a ring on 01978 664316 or send us an e-mail sales@polybush.co.uk