


# Polybush Range List

## Triumph Dolomite 1500 (1975-1980)

Last updated March 2025

Polybush Part Number	Description	OE Part Number	Number Of Bushes Per Vehicle Set	Nett Price Per Bush	Nett Price Per Vehicle Set
30 Series Kit 21					
30A	Rear Lower Trailing Arm Bushes	ULC1580	4		
30B	Rear Upper Link Bushes.	UKC5514	2		
30J	Rear Tie Bar - Axle End Doughnut	152767	4		
30K	Front Anti Roll Bar Bush	153676	2		
30L	Front Upper Wishbone Bush	UKC3444	4		
34P	Lower Drag Strut Bush	152588	2		
			Total Price		
Additional Items					
30C	Crossmember Top Bush	155793	2		
30M	Crossmember Bush	155794	2		
30E	Crossmember Bottom Bush (Front)	159209	2		
1500 Manual uses 2 Sets of 30E's on the Front of the Subframe. 1500 Auto uses 2 sets of 30M's on the Front of the Subframe. Both Manual & Auto use 1 Set of 30M's and 1 Set of 30C's to cover the Rear of the subframe.					
35Q	Engine Gearbox Mounting Bush	UKC5334	1		*Please call for details*
30N	Anti Roll Bar link bush	153735A	1		*Please call for details*
31D	Front or Rear Shock Absorber Upper Bush	C10996	4		
35K	Rear Shock Absorber Lower Bush (2 Bushes Required)	119450	4		
35L	Rear Shock Absorber Lower Bush Oversized		2		*Please call for details*
34A	Steering Rack Bush	139386	2		

## Fitment Diagram

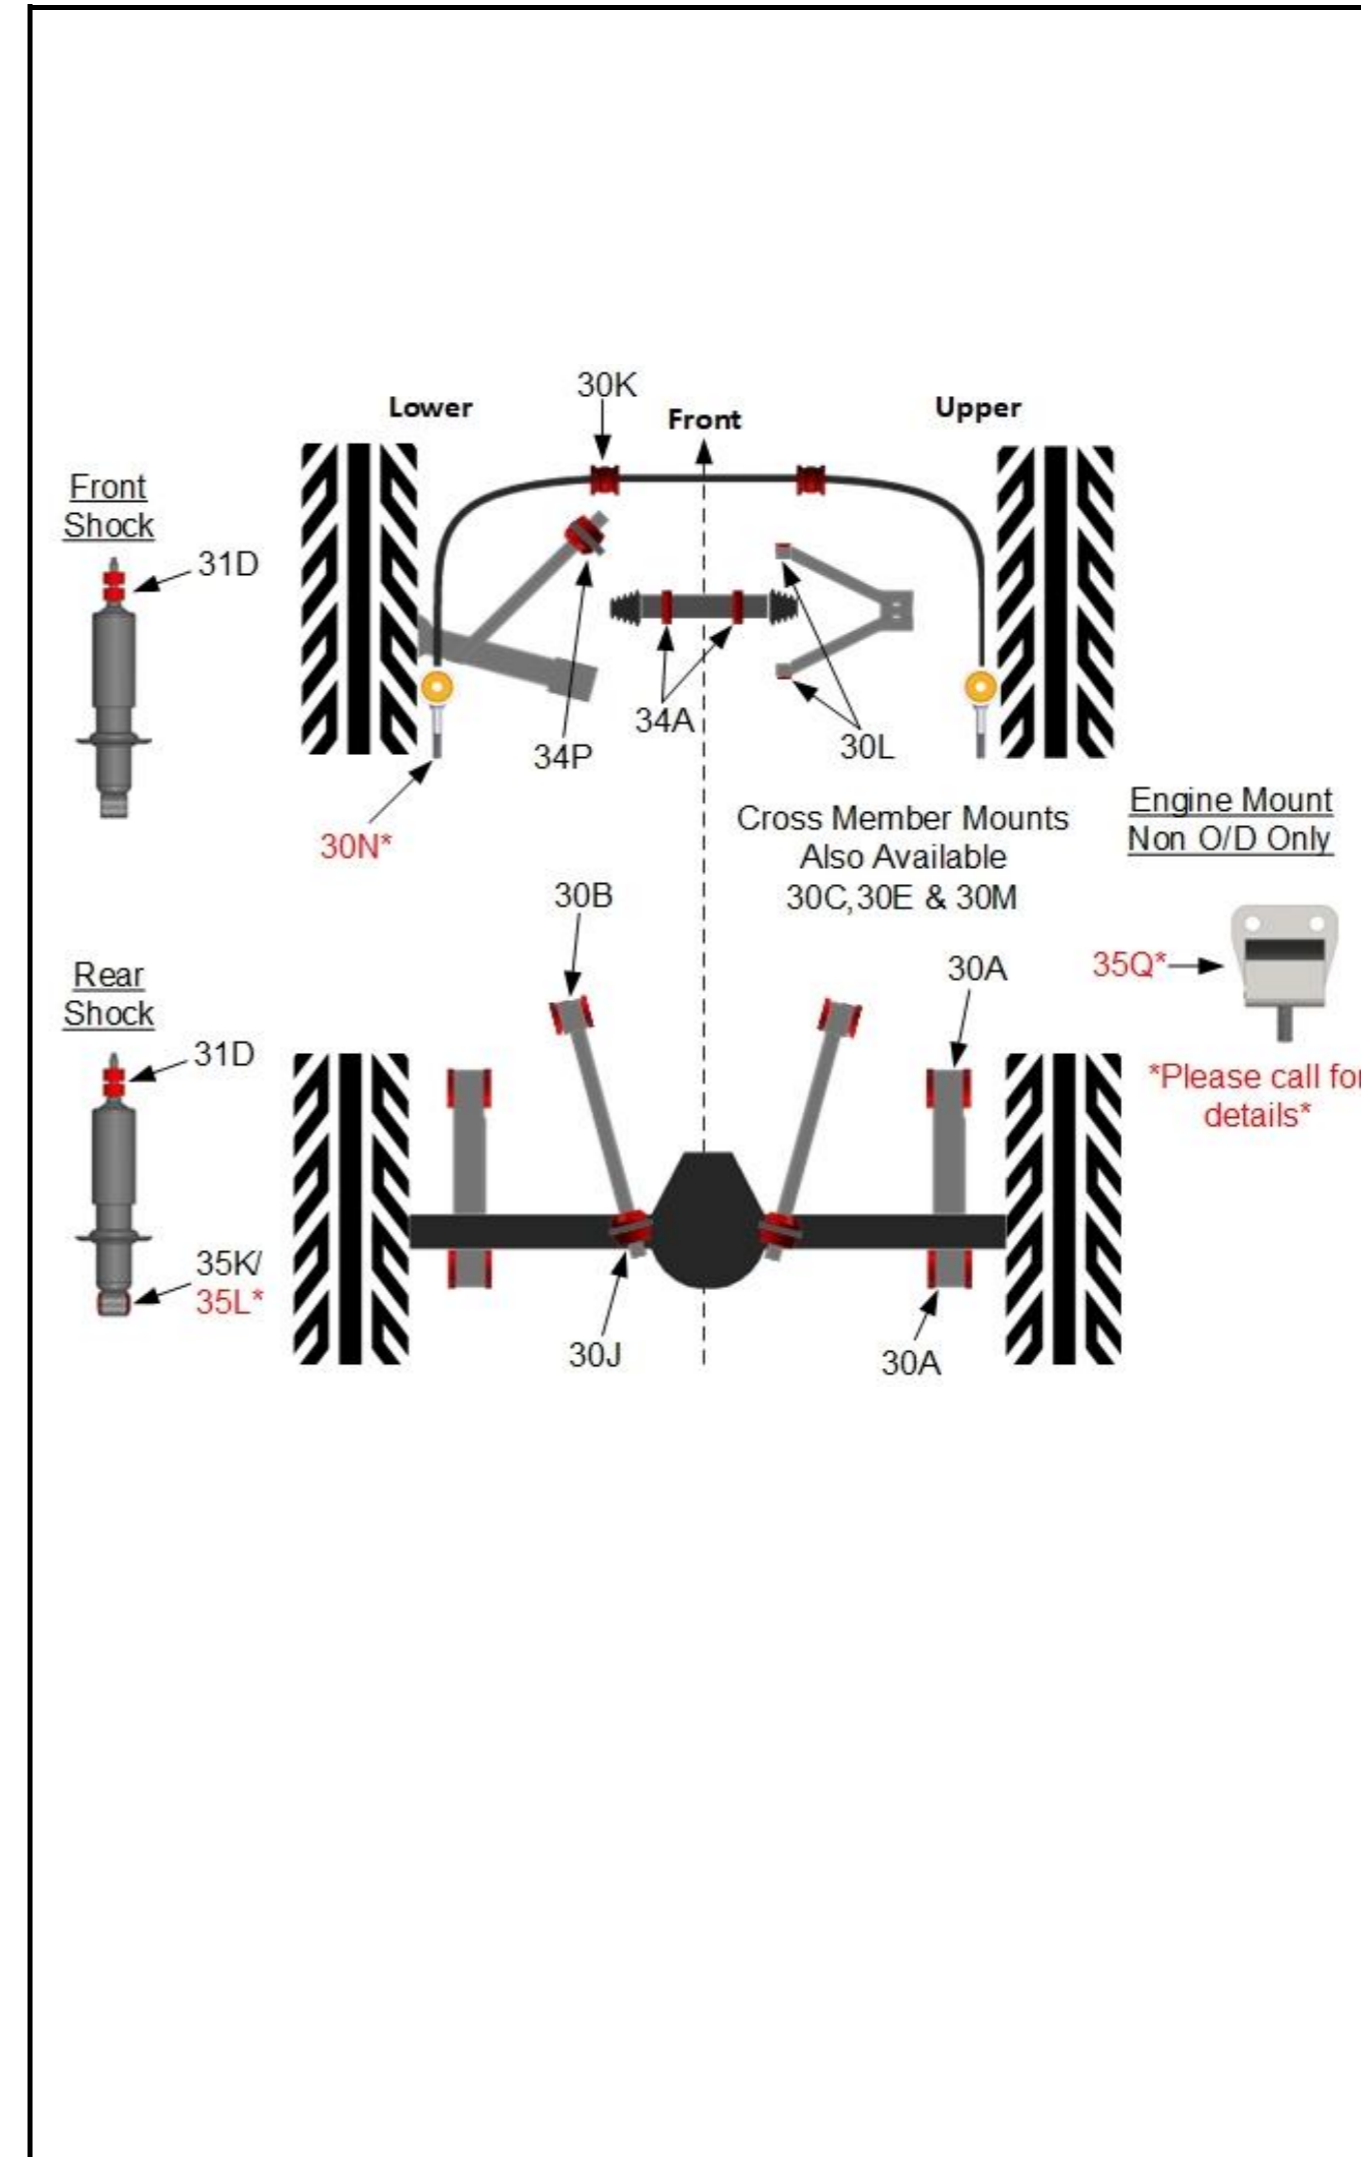

Vehicle suspension geometry must be checked / reset once bushes have been fitted. ALL Part Kits Are Available Separately. O.E. part numbers for reference only. This Price list is subject to our standard conditions of sale, a copy of which is available on request and is exclusive of VAT & carriage. E & O E.

Clywedog Road South, Wrexham Industrial Estate, Wrexham LL13 9XS UK Telephone: (0)1978 664316