


Polybush Range List

Triumph Dolomite 1850 (1972-1980)

Last updated March 2025

Polybush Part Number	Description	OE Part Number	Number Of Bushes Per Vehicle Set	Nett Price Per Bush	Nett Price Per Vehicle Set
30 Series Kit 21					
30A	Rear Lower Trailing Arm Bushes	ULC1580	4		
30B	Rear Upper Link Bushes.	UKC5514	2		
30J	Rear Tie Bar - Axle End Doughnut	152767	4		
30K	Front Anti Roll Bar Bush	153676	2		
30L	Front Upper Wishbone Bush	UKC3444	4		
34P	Lower Drag Strut Bush	152588	2		
			Total Price		
Additional Items					
30C	Crossmember Top Bush	155793	2		
30M	Crossmember Bush	155794	2		
30E	Crossmember Bottom Bush (Front)	159209	2		
2 Sets of 30E's is required to cover the Front of the subframe. 1 Set of 30M's & 1 Set of 30C's is required to cover the Rear of the subframe.					
35S	Gearbox Mounting Rear Bush (Non-Overdrive)	122689	1		*Please call for details*
30N	Anti Roll Bar link bush	153735A	1		*Please call for details*
31D	Front or Rear Shock Absorber Upper Bush	C10996	4		*Please call for details*
35K	Rear Shock Absorber Lower Bush (2 Bushes Required)	119450	4		
35L	Rear Shock Absorber Lower Bush Oversized		2		*Please call for details*
34A	Steering Rack Bush	139386	2		

Fitment Diagram

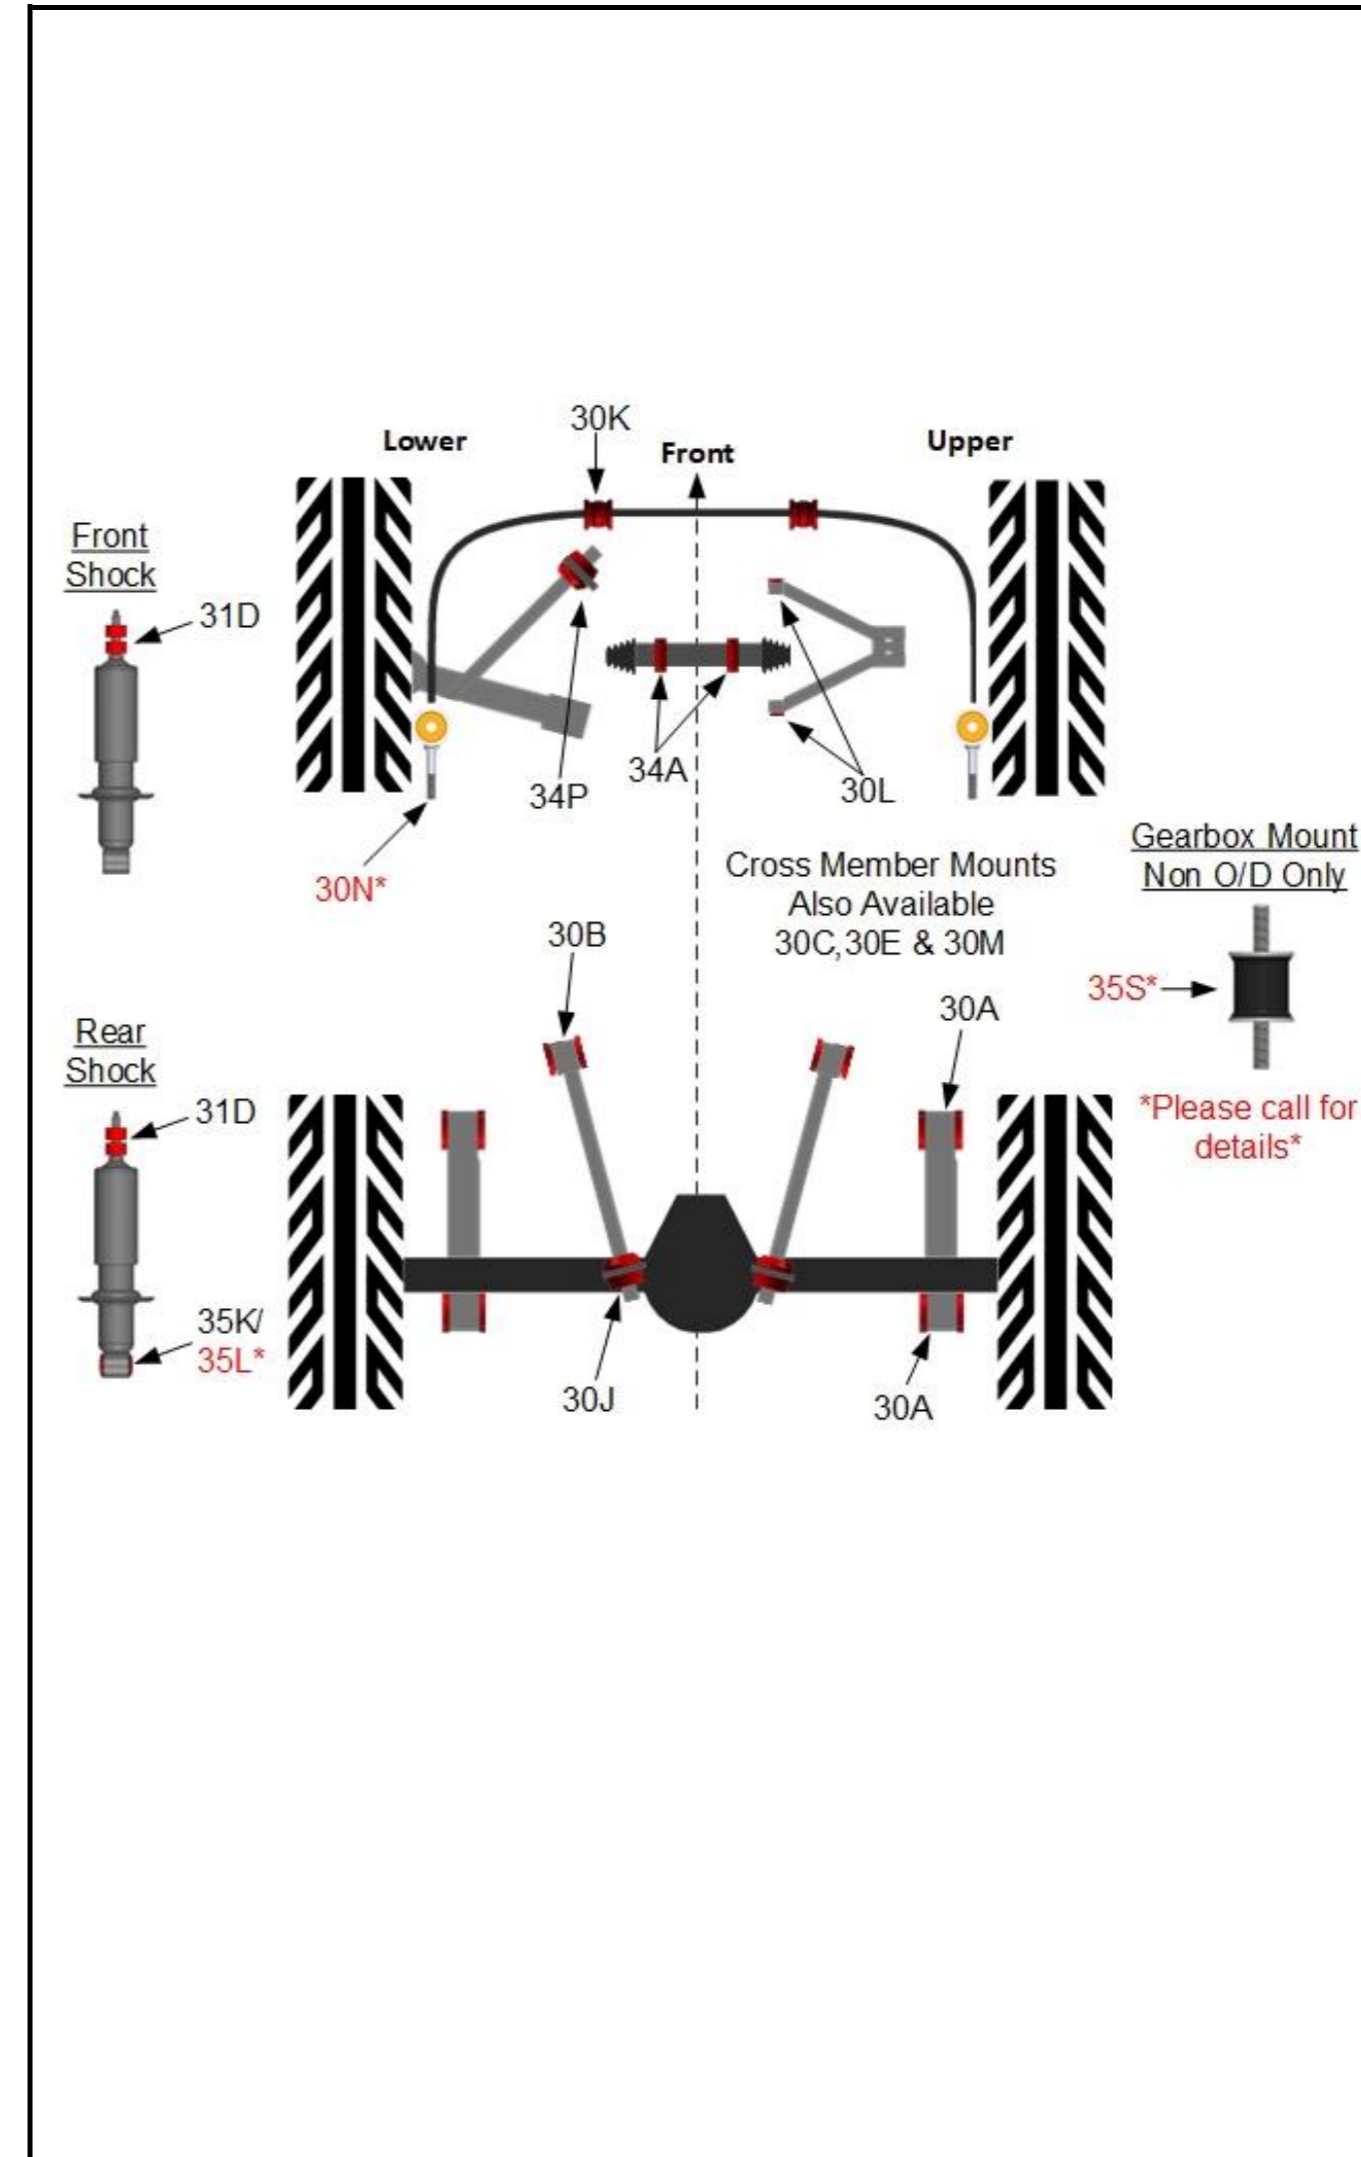

Vehicle suspension geometry must be checked / reset once bushes have been fitted. ALL Part Kits Are Available Separately. O.E. part numbers for reference only. This Price list is subject to our standard conditions of sale, a copy of which is available on request and is exclusive of VAT & carriage. E & O.E.

Clywedog Road South, Wrexham Industrial Estate, Wrexham LL13 9XS UK Telephone: (0)1978 664316