

FITTING INSTRUCTIONS

44GD Rear Differential Bushes

44GD Contains: 2 x 44GD Lower Bushes 2 x Inner Tubes

<u>BEFORE Starting</u>: These bushes should be installed before fitting the Subframe Bushes (44GB).

Step 1: Remove existing bushes.

Step 2:

Ensure bores are clean from debris and remove any sharp edges.

Step 3:

44GD should be pressed in from the inside of the subframe to the outside as shown in the diagram.


Step 4:


Press the inner tube in from the outside of the subframe until fully seated in the bush.


Step 5: Repeat on oppsite side.

Step 6:

Install the differential mounting cradle and torque to manufactuers specification.

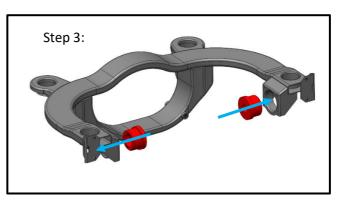

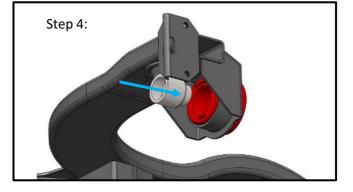

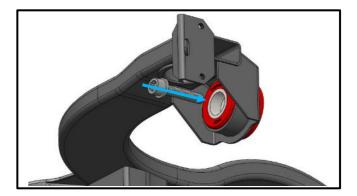

If you have any questions regarding the fitment of these bushes, please give us a ring on 01978 664316 or send us an e-mail sales@polybush.co.uk